
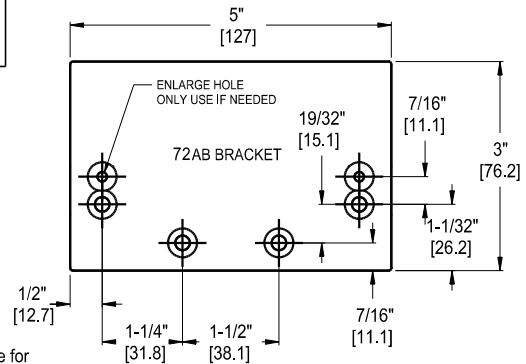


## 72AB & 72C BRACKETS & 72CB CARRY BAR INSTALLATION



### INSTALLATION OF 72AB OR 72C BRACKET WHEN REQUIRED

72AB and 72C brackets are available when it is necessary to mount parallel arm closers, non-fire rated vertical rod strikes, or any soffit applied hardware. Supplied with 4 ea. 1/4-20 x 1/2" FH screws to mount the required hardware. The mounting holes supplied in the bracket are to mount the bracket to the frame. Drill and tap the bracket for the soffit applied hardware. The depth of the soffit will determine the required bracket. See below.

#### 72AB BRACKET FOR SOFFIT WIDTHS UP TO 2-1/4" [57.2]

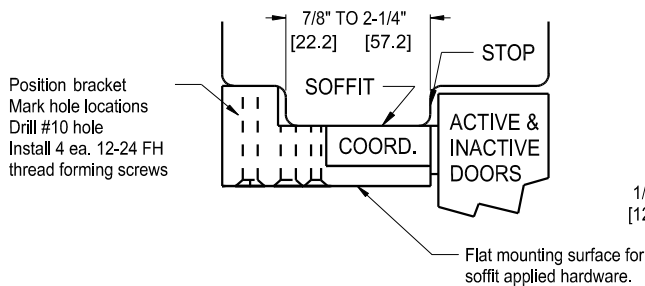


#### 72C BRACKET FOR SOFFITS WIDTHS OVER 2-1/4" [57.2]

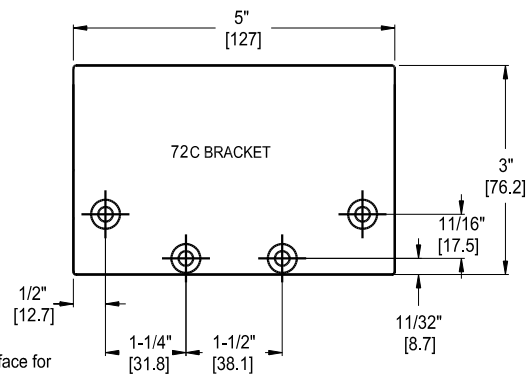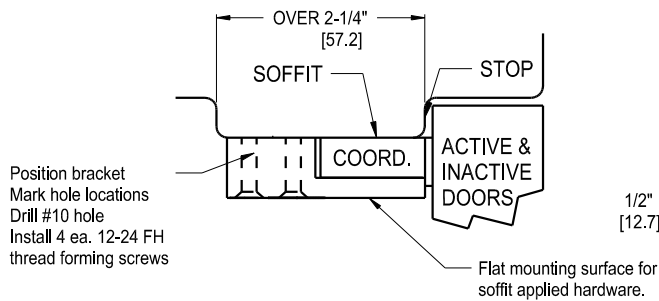

### INSTALLATION OF 72CB CARRY BAR WHEN REQUIRED

1. Drill two 1/4" [6.4] dia. holes thru inactive door.
2. Enlarge door skin opposite carry bar to 3/8" [9.5] dia. for sex nuts.
3. Mount carry bar with 2 ea. 12-24 screws and sex nuts.

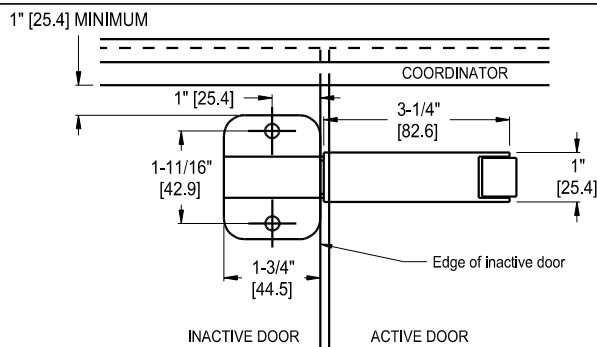

**NOTE:** Due to occasional product changes, please ensure your template is current by checking our website at [www.burnsmfg.com](http://www.burnsmfg.com) or call us at 814-833-7428. Burns Mfg. is not responsible for obsolete template errors.

**Date: 4/10 - Rev. 1**