



7500 RHRB ACTIVE GRAVITY DOOR COORDINATOR TEMPLATE

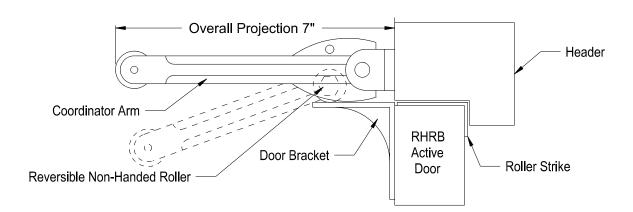

MOUNTING INSTRUCTIONS

Refer to Drill Schedule

- 1. Locate centerline of doors on header.
- 2. Mount Cooordinator.
- 3. Mount Roller Strike on Inactive Door.
- 4. Drill C holes and mount Door Bracket.
- 5. Adjust Door Bracket flush with Roller Strike. Drill D Hole to secure Strike in place.

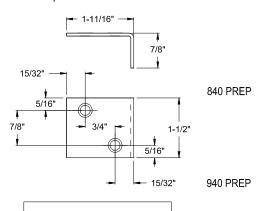


DRILL SCHELDULE

Coordinator "A" holes: 2 ea #10 x 1" FHSMS Drill #24 (.152) in steel Drill #17 (.173) in wood

Roller Strike "B" holes: 2 ea. #10 x 1" FHSMS Drill #24 (.152) in steel Drill #17 (.173) in wood

Door Bracket "C & D" holes 3 ea #8 x 1" FHSMS Drill #26 (.147) in steel Drill #30 (.128) in wood

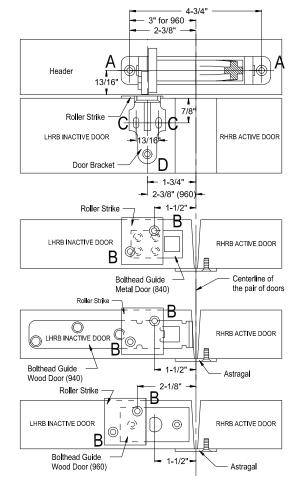

SEE REVERSE SIDE FOR LHRB TEMPLATE


Date: 4/10 - Rev. 1

NOTE: Due to occasional product changes, please ensure your template is current by checking our website at www.burnsmfg.com or call us at 814-833-7428. Burns Mfg. is not responsible for obsolete template errors.

960 PREP




7500 LHRB ACTIVE GRAVITY DOOR COORDINATOR TEMPLATE

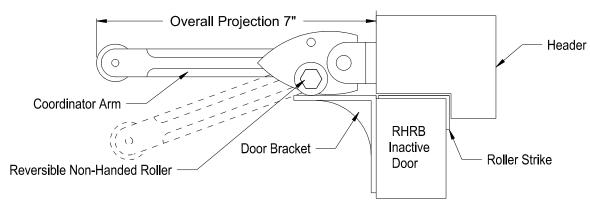

MOUNTING INSTRUCTIONS

Refer to Drill Schedule

- 1. Locate centerline of doors on header.
- 2. Mount Cooordinator.
- 3. Mount Roller Strike on Inactive Door.
- 4. Drill C holes and mount Door Bracket.
- Adjust Door Bracket flush with Roller Strike. Drill D Hole to secure Strike in place.

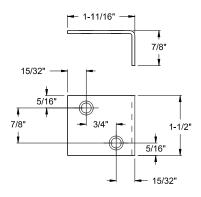


DRILL SCHELDULE

Coordinator "A" holes: 2 ea #10 x 1" FHSMS Drill #24 (.152) in steel Drill #17 (.173) in wood

Roller Strike "B" holes: 2 ea. #10 x 1" FHSMS Drill #24 (.152) in steel Drill #17 (.173) in wood

Door Bracket "C & D" holes 3 ea #8 x 1" FHSMS Drill #26 (.147) in steel Drill #30 (.128) in wood

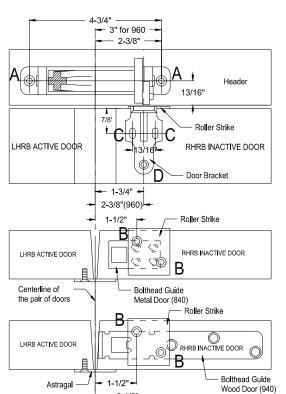

2-1/8

SEE REVERSE SIDE FOR RHRB TEMPLATE

Roller Strike

Bolthead Guide

Wood Door (960)

Date: 4/10 - Rev. 1

RHRB INACTIVE DOOR

NOTE: Due to occasional product changes, please ensure your template is current by checking our website at www.burnsmfg.com or call us at 814-833-7428. Burns Mfg. is not responsible for obsolete template errors.

LHRB ACTIVE DOOR

Astraga

840 PREP

940 PREP

960 PREP